

MOBILE SCAFFOLD TOWERS COMPACT XS

FARAONE®
TECHNIQUE
WORK SAFELY AT HEIGHT



2025 MOBILE
SCAFFOLD
TOWERS
ASSEMBLY
AND OPERATING
INSTRUCTIONS



NOTE!
Read these operating instructions before using the mobile scaffold tower.
Always follow the OHS instructions.

TABLE OF CONTENTS

1. COMPACT XS model overview and list of parts.....	3
2. Introduction.....	4
3. Safety provisions – extract from EN1004 standard.....	5
4. Configurations of COMPACT XS 160 /180.....	7
5. Photographs of parts of COMPACT XS 160 / 180 mobile scaffold towers.....	12
6. Assembly instructions.....	13
7. Guarantee.....	15
8. Transport, storage and maintenance.....	17



NOTE!

Read these operating instructions before using the mobile scaffold tower.
Always follow the OHS instructions.

ASSEMBLY AND OPERATING INSTRUCTIONS FOR COMPACT XS 160, 180 MOBILE SCAFFOLD TOWERS

Model overview



PACKAGE A




PACKAGE A + KIT



PACKAGE A + B




PACKAGE A + B + C

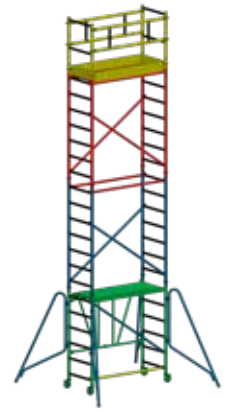

PACKAGE A + B + C + D


Mobile scaffold tower dimensions 75x160 cm

Klasa 3: Total permissible load - 180 kg/m²

	HEIGHT / MODEL	COM160XS.A	COM160XS.KIT	COM160XS.A.KIT	COM160XS.B	COM160XS.AB	COM160XS.C	COM160XS.ABC	COM160XS.D	COM160XS.ABCD
	H2 (m)	2,6		2,9		3,7		5,7		7,6
	H1 (m)	1,9		2,0		2,8		4,7		6,7
	H (m)	0,6		0,9		1,7		3,7		
	Scaffolding weight (kg)	31,5			22		27		28	5,3
Code	Description	Item	Item	Item	Item	Item	Item	Item	Item	Item
PS75160.6.40	Closing base 0.75x1.6 (m)	1		1		1		1		1
F75200.40	Frame 0.75x2.0 (m)						2	2	2	4
RB160E	Landing with trapdoor	1		1		1		1	1	2
T7525.40	Frame 1		2	2						
T75.40	Frame 2				2	2		2		2
TF160E	Long toe board				2	2		2		2
TF75E	Short toe board				2	2		2		2
P160	Railing				2	2		2		2
TR160.40	Crossbar		3	3	1	1		1	2	3
D160.40	Diagonal						3	3	2	5
STAB1.40	Stabilizer						4	4		4

Mobile scaffold tower dimensions 75x180 cm

Klasa 3: Total permissible load - 200 kg/m²

	HEIGHT / MODEL	COM180XS.A	COM180XS.KIT	COM180XS.A.KIT	COM180XS.B	COM180XS.AB	COM180XS.C	COM180XS.ABC	COM180XS.D	COM180XS.ABCD
	H2 (m)	2,6		2,9		3,7		5,7		7,6
	H1 (m)	1,9		2,0		2,8		4,7		6,7
	H (m)	0,6		0,9		1,7		3,7		5,6
	Scaffolding weight (kg)	36			24		38		36	
Code	Description	Item	Item	Item	Item	Item	Item	Item	Item	Item
PS75180.6.40	Closing base 0.75x1.68(m)	1		1		1		1		1
F75200.40	Frame 0.75x2.0 (m)						2	2	2	4
RB180E	Landing with trapdoor	1		1		1		1	1	2
T7525.40	Frame 1		2	2						
T75.40	Frame 2				2	2		2		2
TF180E	Long toe board				2	2		2		2
TF75E	Short toe board				2	2		2		2
P180	Railing				2	2		2		2
TR180.40	Crossbar		3	3	1	1		1	2	3
D180.40	Diagonal						3	3	2	5
STAB1.40	Stabilizer						4	4		4

**NOTE!**

Read these operating instructions before using the mobile scaffold tower.
Always follow the OHS instructions.

INTRODUCTION

Assembly and operating instructions – general information

After unpacking, inspect the tower parts for damage. Check if you have received all the tower parts you ordered; if any are missing, contact the supplier.

Use only undamaged and properly functioning parts!

Prior to assembly and disassembly, the danger zone must be marked out and fenced off.

The use of the mobile scaffold towers, especially assembly and disassembly, must be performed in accordance with the regulations in force in the country concerned.

The mobile scaffold towers are made in accordance with EN1004.

When assembling, stabilising and using mobile scaffold towers, the operating instructions must be followed. The towers can only be erected by authorised persons who have been acquainted with these operating instructions.

The buyer loses his guarantee rights in the event of:

- the use of the product contrary to its intended purpose, characteristics, operating instructions or rules of use,
- the performance of repairs, alterations or structural changes by persons other than the Guarantor,
- the improper storage of the product or improper maintenance.

The mobile scaffold towers specified in this manual consist of various individual parts that can be purchased as spare parts or modules to expand the tower.

If problems arise when assembling, moving or folding the tower, report them to the supplier.

In mobile scaffold towers, all relevant parts should be inspected: casters, brakes, latching hooks and safety devices on frames and platforms.

Manufacturer

Faraone Poland Sp. z o. o. ul. Prosta 32, Łozienica, 72-100 Goleniów

Tel: +48 91 579 03 90, e-mail: info@faraone.pl, www.faraone.pl

Faraone Poland Sp. z o.o. shall not be liable for claims for damages by injured parties who have unintentionally disregarded the safety provisions and instructions in these operating instructions.



NOTE!

Read these operating instructions before using the mobile scaffold tower.
Always follow the OHS instructions.

Safety provisions – extract from EN1004 standard

RYS. A



RYS.A: Mobile scaffold towers can be assembled and disassembled only by authorised persons who have knowledge of the instructions and practical experience in assembly and use.

RYS.B: Damaged parts must not be used.

RYS.C: Only original parts in accordance with the manufacturer's instructions should be used.

RYS.D: The substrate on which the mobile scaffold towers are moved must be of adequate strength. This substrate must be level, without holes or significant protrusions. If working on uneven ground, any voids should be covered.

RYS.E: During displacement, there must be no materials or persons on the travelling tower. Check each time if there are no obstacles or electrical cables in the displacement area. The mobile scaffold towers have no insulation.

RYS. E



RYS.F: Mobile scaffold towers can only be moved by hand, and only on compact, smooth and obstacle-free surfaces. When moving, the normal walking speed must not be exceeded. Before moving, reduce the height of the tower according to the condition of the pavement and the strength of the wind.

RYS.G: Before use, check that the mobile scaffold tower has been assembled in accordance with these instructions and that it is in an upright position.

RYS.H: The attachment and use of hoisting equipment is not permitted.

RYS. G



RYS. B




RYS. D



RYS. F



RYS. H

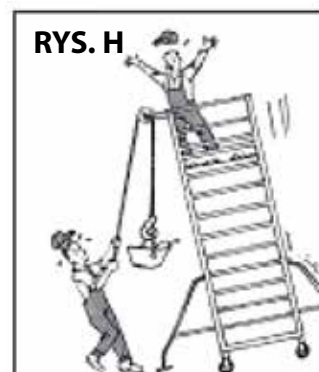


NOTE!


Read these operating instructions before using the mobile scaffold tower.
Always follow the OHS instructions.

RYS. I


RYS.I: No bridging is allowed between the mobile scaffold towers and a building or other structure not part of the mobile scaffold towers.

RYS.L: Before use, ensure that all safety measures to prevent accidental movement of the tower, i.e. special locking brakes and possibly adjustable clamps, were applied.

RYS.M: It is forbidden to ascend or descend from work platforms outside the areas designated for this purpose.

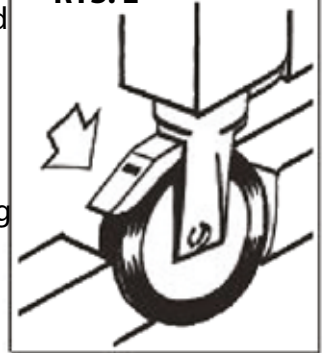RYS. L

RYS. M


RYS.N: It is not permitted to jump on the tower or to place loads or persons the weight of whom exceeds the load capacity specified by the manufacturer. Under no circumstances should additional structures be supported on platforms or rungs to increase the working height.

RYS. N

NOTE!

The entry and exit of a worker from a mobile scaffold tower should always take place inside the mobile scaffold tower.




NOTE!

Read these operating instructions before using the mobile scaffold tower.
Always follow the OHS instructions.

CONFIGURATIONS OF COMPACT XS 160 / 180

Compact XS A

Part no.	Kod COM160XS.A	Kod COM180XS.A	Description	Item
①	PS75160.6.40	PS75180.6.40	Closing base 0.75x1.60 (m) / 0.75x1.80 (m)	1
②	RB160E	RB180E	Landing with trapdoor	1

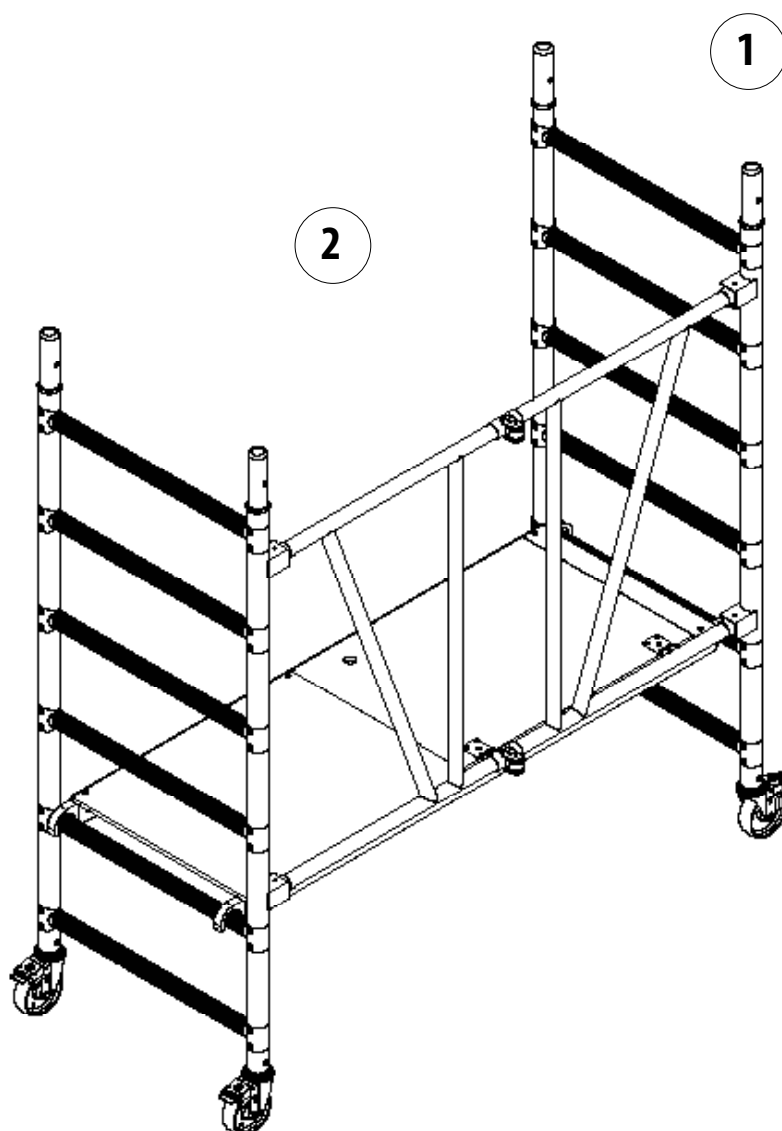



NOTE!

Read these operating instructions before using the mobile scaffold tower.
Always follow the OHS instructions.

CONFIGURATIONS OF COMPACT XS 160 / 180

Compact XS A+KIT

Part no.	Kod COM160XS.A.KIT	Kod COM180XS.A.KIT	Description	Item
①	PS75160.6.40	PS75180.6.40	Closing base 0.75x1.60 (m) / 0.75x1.80 (m)	1
②	RB160E	RB180E	Landing with trapdoor	1
③	T7525.40	T7525.40	Frame 1	2
④	TR160.40	TR180.40	Crossbar	3

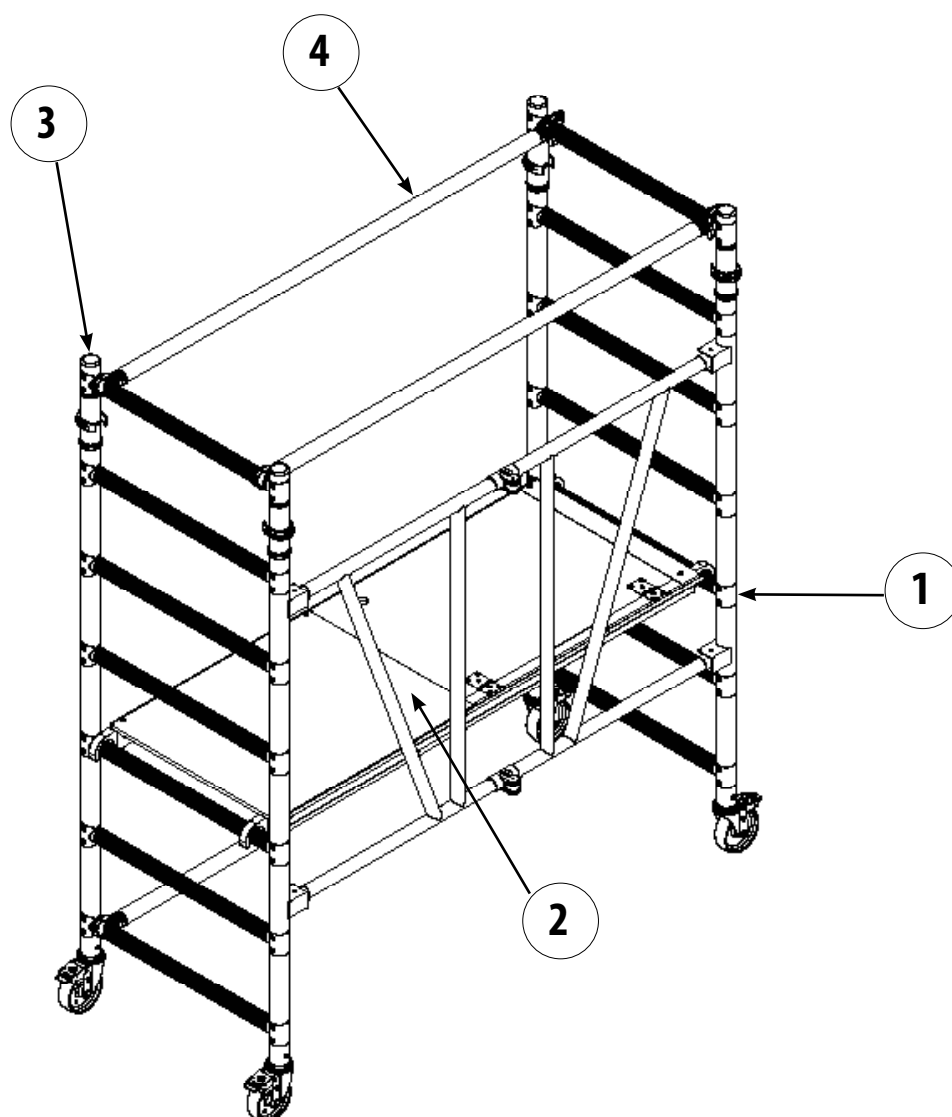




NOTE!

Read these operating instructions before using the mobile scaffold tower.
Always follow the OHS instructions.

CONFIGURATIONS OF COMPACT XS 160 / 180

Compact XS A+B

Part no.	Kod COM 160XS.AB	Kod COM 180XS.AB	Description	Item
①	PS75160.6.40	PS75180.6.40	Closing base 0.75x1.60 (m) / 0.75x1.80 (m)	1
②	RB160E	RB180E	Landing with trapdoor	1
③	TR160.40	TR180.40	Crossbar	1
④	TF160E	TF180E	Long toe board	2
⑤	TF75E	TF75E	Short toe board	2
⑥	T75.40	T75.40	Frame 2	2
⑦	P160	P180	Railing	2

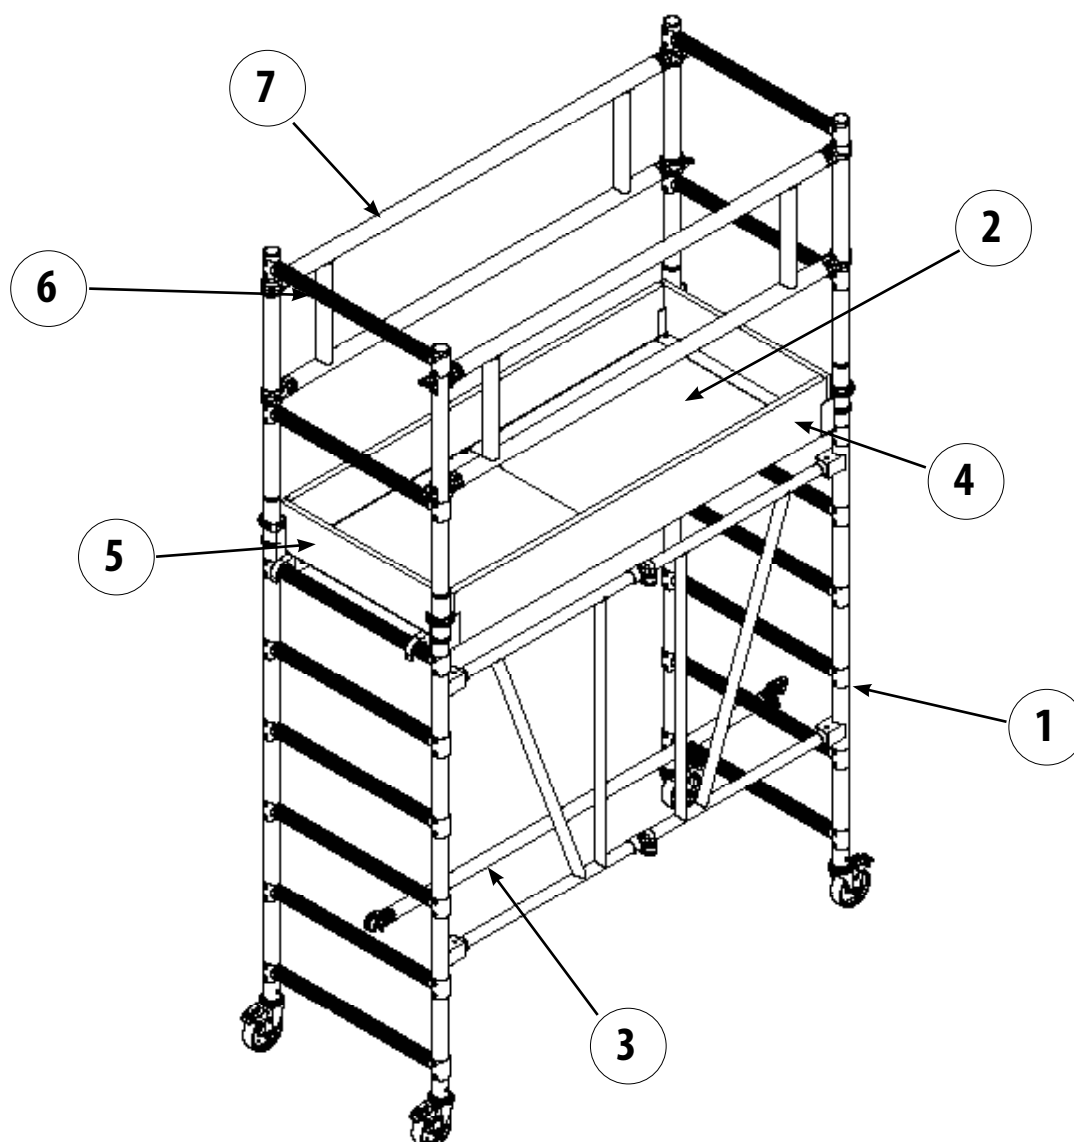


**NOTE!**

Read these operating instructions before using the mobile scaffold tower.
Always follow the OHS instructions.

CONFIGURATIONS OF COMPACT XS 160 / 180

Compact XS A+B+C

Part no.	Kod COMXS160.ABC	Kod COMXS180.ABC	Description	Item
①	PS75160.6.40	PS75180.6.40	Closing base 0.75x1.60 (m) / 0.75x1.80 (m)	1
②	TR160.40	TR180.40	Crossbar	1
③	D160.40	D180.40	Diagonal	3
④	F75200.40	F75200.40	Frame 0.75x2.00 (m)	2
⑤	TF160E	TF180E	Long toe board	2
⑥	TF75E	TF75E	Short toe board	2
⑦	RB160E	RB180E	Landing with trapdoor	1
⑧	P160	P180	Railing	2
⑨	T75.40	T75.40	Frame 2	2
⑩	STAB1.40	STAB1.40	Stabilizer	4

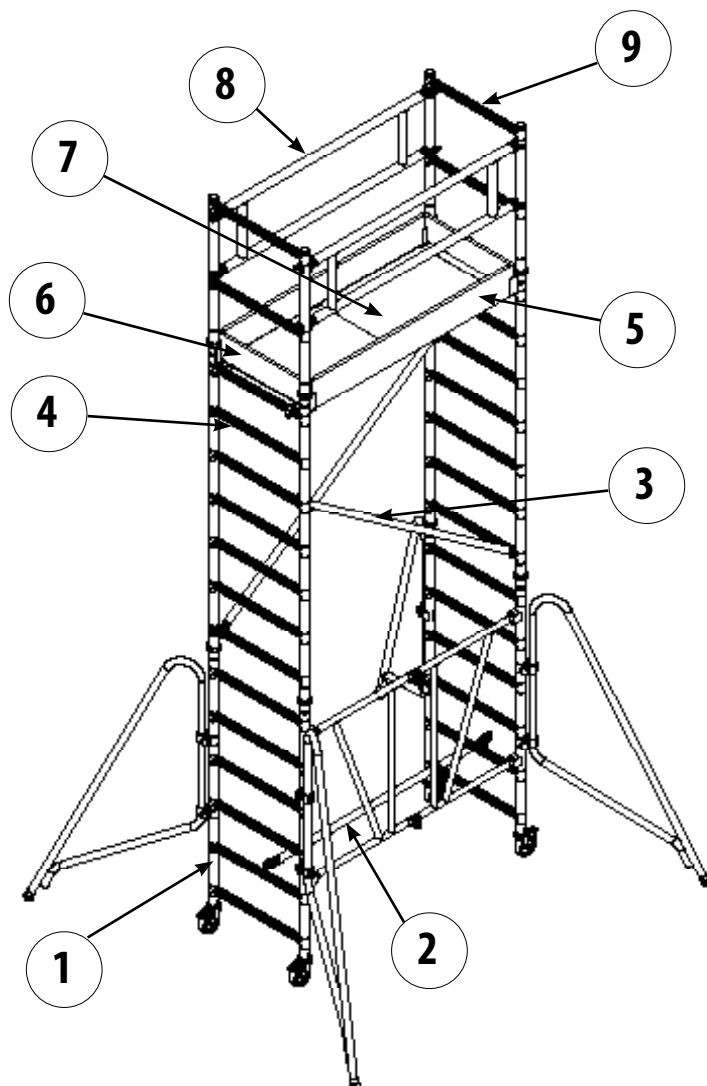




NOTE!

Read these operating instructions before using the mobile scaffold tower.
Always follow the OHS instructions.

CONFIGURATIONS OF COMPACT XS 160 / 180

Compact XS A+B+C+D

Nr. Elementu	Kod COM160XS.ABCD	Kod COM180XS.ABCD	Description	Item
①	PS75160.6.40	PS75180.6.40	Closing base 0.75x1.60 (m) / 0.75x1.80 (m)	1
②	TR160.40	TR180.40	Crossbar	3
③	D160.40	D180.40	Diagonal	5
④	F75200.40	F75200.40	Frame 0.75x2.00 (m)	4
⑤	TF160E	TF180E	Long toe board	2
⑥	TF75E	TF75E	Short toe board	2
⑦	RB160E	RB180E	Landing with trapdoor	2
⑧	P160	P180	Railing	2
⑨	T75.40	T75.40	Frame 2	2
⑩	STAB1.40	STAB1.40	Stabilizer	4

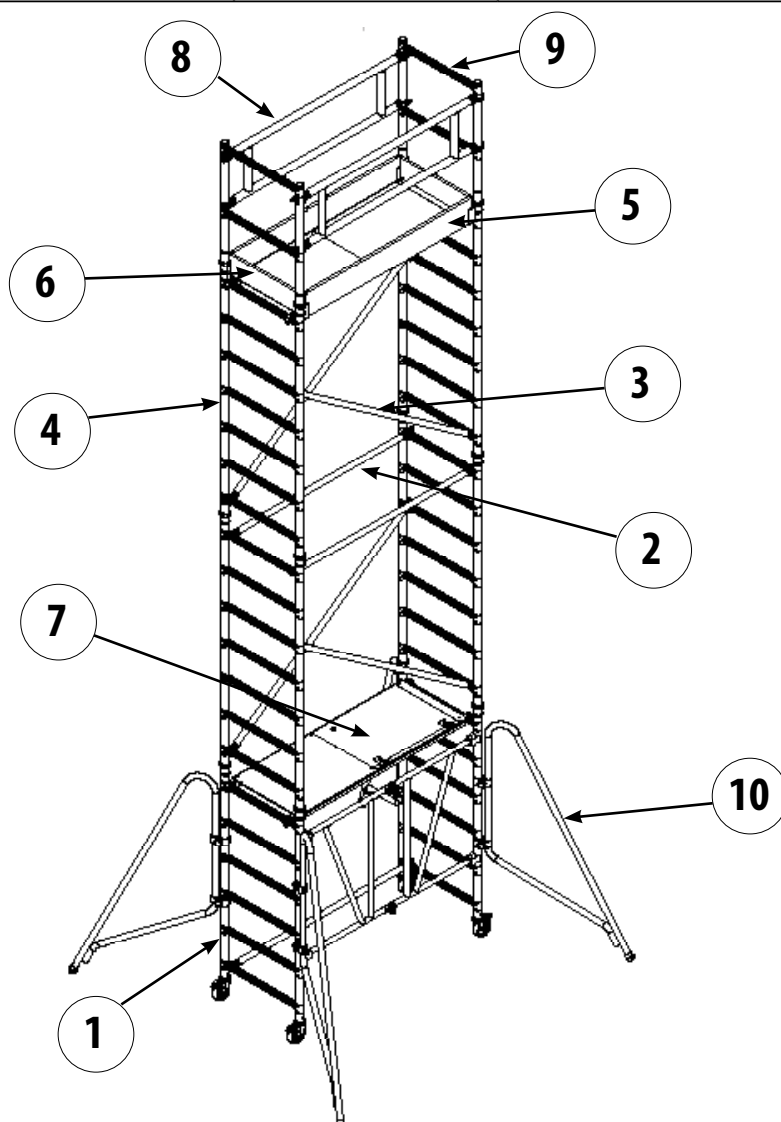

**NOTE!**

Read these operating instructions before using the mobile scaffold tower.
Always follow the OHS instructions.

PARTS OF COMPACT XS 160 / 180 MOBILE SCAFFOLD TOWER

**zdj.1**

Closing base 0.75x1.60
/ 0.75x1.80 (m)

**zdj.2**

Closing base lock

**zdj.3**

Caster lock

**zdj.4**

Landing

**zdj.6**

Frame 1

**zdj.5**

Crossbar

**zdj.8**

Railing

**zdj.10**

Diagonal

**zdj.9**

Toe board

**zdj.7**

Frame 2

**zdj.12**

Stabilisers



Stabiliser connectors

**zdj.11**

Frame 0.75x2.00 (m)



NOTE!

Read these operating instructions before using the mobile scaffold tower.
Always follow the OHS instructions.

ASSEMBLY INSTRUCTIONS FOR A, A+KIT, AB MODULES

Module A

- a) Place the folding frame (fig.1) upright and then spread it out to the sides until the central hinges close
- b) Lock the casters by lowering the ratchet lock (fig.3).
- c) Attach the platform (fig.4) on the 3rd rung of the folding frame.


A+KIT module

- a) Place the folding frame (fig.1) upright and then spread it out to the sides until the central hinges close (fig.2) and the long frame is braced.
- b) Lock the casters by lowering the ratchet lock (fig.3).
- c) Attach the platform (fig.4) on the 3rd rung of the folding frame.
- d) Mount the crossbar (fig.5) on the first rung on the opposite side of the folding frame, then mount the gable frame parts (fig.6) on top of the base, then place two crossbars (fig.5) on the edges of the frame.

Module A+B

- a) Place the folding frame (fig.1) upright and then spread it out to the sides until the central hinges close (fig.2) and the long frame is braced.
- b) Lock the casters by lowering the ratchet lock (fig.3).
- c) Attach the platform (fig.4) on the 3rd rung of the folding frame.
- d) Mount the crossbar (fig.5) on the first rung on the opposite side to the folding frame side, then mount the gable frame parts (fig.7) on top of the base, then place two railings (fig.8) on the edges of the frame.
- e) Mount the toe boards on the platform (fig.9).

Montaż stężeń w COMPACT XS

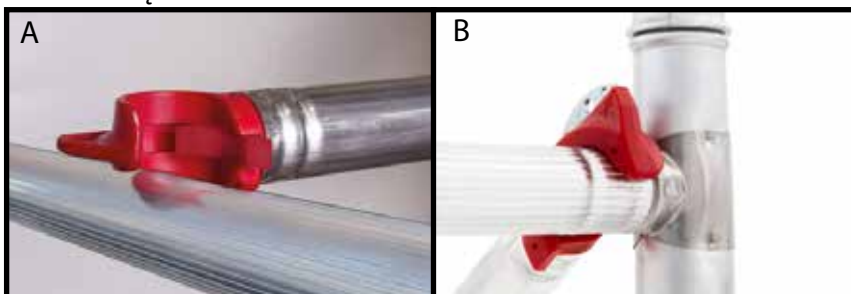

**NOTE!**

Read these operating instructions before using the mobile scaffold tower.
Always follow the OHS instructions.

ASSEMBLY INSTRUCTIONS FOR A+B+C, A+B+C+D MODULES

Module A+B+C

- a) Place the folding frame (fig.1) upright and then spread it out to the sides until the central hinges close (fig.2) and the long frame is braced.
- b) Lock the casters by lowering the ratchet lock (fig.3).
- c) Attach a crossbar (fig.5) on the first rung on the opposite side to the folding frame side and then, also on the opposite side to the folding frame, one diagonal (fig.10) on the 2nd and 6th rung.
- d) Connect the two-metre frames (fig.11) to the gable frames (fig.7) and then place them on the base.
- e) Brace the 2 m frames with two diagonals (fig.10) so that one diagonal is placed on the 7th rung of the left frame and the right brace on the 11th rung. Repeat with the second diagonal on the opposite side in reverse so that the bracings cross.
- f) Mount the four stabilisers (fig.12) on the vertical edges of the frames. The top handle between the 6th and 7th rung and the bottom handle between the 3rd and 4th rung.
- g) Place the platform (fig.4) on the 13th step of the side frames.
- h) Place two railings on the edges of the gable frame (fig.8).
- i) Mount the toe boards on the platform (fig. 9).

Module A+B+C+D

- a) Place the folding frame (fig.1) upright and then spread it out to the sides until the central hinges close (fig.2) and the long frame is braced.
- b) Lock the casters by lowering the ratchet lock (fig.3).
- c) Attach a crossbar (fig.5) on the first rung on the opposite side to the folding frame side and then, also on the opposite side to the folding frame, one diagonal (fig.10) on the 2nd and 6th rung.
- d) Place the platform (fig.4) on the 6th step of the base frame.
- e) Mount the two 2m frames (fig.11) on the base and brace them with two diagonals (fig.10) so that one diagonal is placed on the 7th rung of the left frame and the right one on the 11th rung. Repeat with the other diagonal on the opposite side in reverse so that the bracings cross.
- f) Mount the four stabilisers (fig.12) on the vertical edges of the frames. The top handle between the 6th and 7th rung and the bottom handle between the 3rd and 4th rung.
- g) Place two crossbars on the edges of the 13th rung (fig.5).
- h) Connect the two-metre frames (fig.11) to the gable frames (fig.7) and then place them on the base.
- i) Brace the 2 m frames with two diagonal braces (fig.10) so that one brace is placed on the 7th rung of the left frame and the right brace on the 11th rung. Repeat with the second brace on the opposite side in reverse so that the bracings cross.
- j) Place the platform (fig.4) on the 20th rung of the side frames.
- k) Place two railings on the edges of the gable frame (fig.8).

GUARANTEE

Warranty conditions and post-warranty repairs

1. General provisions

- 1.1. These Terms and Conditions of Warranty and Post-Warranty Repairs, hereinafter referred to as the Terms and Conditions, govern the rules for making by: Faraone Poland Sp. z o. o. street Prosta 32, Łozienica, 72-100 Goleniów, warranty and post-warranty repairs of products marked with the following brands: Faraone and Akala (does not apply to Elevah products), and are posted on the website www.faraone.pl.
- 1.2. The terms and conditions apply to warranty and post-warranty repairs of products for which the Guarantor is the entity obliged to perform such repairs.
- 1.3. Ordering a warranty or post-warranty repair by the User is tantamount to acceptance of these Terms and Conditions.

2. Warranty

- 2.1. Faraone Poland Sp. z o. o., hereinafter also referred to as the Guarantor, grants a warranty for the offered products for the period:
 - a) 12 months for Akala Linia Hobby products,
 - b) 12 months for special products,
 - c) 12 months for lifts,
 - d) 24 months for standard products: ladders, platforms, scaffolding / mobile towers and working platforms.
- 2.2. The warranty is offered in addition and does not limit the rights specified by the current ones and future legal provisions, including does not exclude, limit or suspend consumer rights.
- 2.3. The warranty services provided by the Guarantor do not result in the extension or renewal of the warranty, subject to the appropriate application of Art. 581 of the Civil Code.
- 2.4. The warranty is valid within the European Union.

3. Warranty repairs

- 3.1. The warranty period begins when the product is purchased by the first User, and the date on the original proof of purchase inserted by the Guarantor or the distributor of Faraone Poland Sp. z o. o.
- 3.2. The warranty covers only product defects resulting solely from the fault of the Guarantor and arising from reasons inherent in the product (hidden manufacturing or material defects), provided that:
 - a) the product was used in accordance with the Instruction Manual and intended use, and properly maintained and stored,
 - b) the product has not been repaired, disassembled or modified by unauthorized persons, other than employees or representatives of the Guarantor,
 - c) the marking with the product's serial number has not been destroyed (removed).
- 3.3. Defects within the meaning of these Terms and Conditions do not include, in particular, defects resulting from: natural wear, excessive load and/or improper use, exposure to chemicals or high humidity, as well as those resulting from natural disasters (forces of nature), or resulting from mechanical damage, including those related to the transport of the product.
- 3.4. The maximum liability of the Guarantor under the warranty, as well as the general liability for damages related to the delivery of the defective product, may not exceed the price paid for the product in respect of which the claim was made. This limitation does not apply to liability for damage caused by the Guarantor's willful misconduct.
- 3.5. The user loses his warranty rights if any of the circumstances listed in point. 3.2. a) – 3.2.c).
- 3.6. The user may exercise the warranty rights provided that:
 - a) immediately after noticing the defect, submitted a warranty claim in the form indicated in point 3.7.a) of these Terms and Conditions,
 - b) the complained product has features enabling its identification as a product from the Guarantor.

GUARANTEE

3.7. The conditions for starting warranty repairs are:

a) correct completion by the User of the Repair Report Form on the website www.faraone.pl, i.e. completion of all fields marked with (*),

b) delivery of the product to the Guarantor's office, on a previously agreed date, at the Guarantor's own expense. The Guarantor will refund the shipping costs, if the complaint is recognized as a warranty repair, up to the amount of:

- EURO 25.00 net for products up to 3 m long,
- EURO 65.00 net for products over 3 m long,
- EURO 0,5.00 net per 1 km - in the case of large special products.

The reimbursement of costs incurred will be based on a VAT invoice issued in electronic form by the Ordering Party of the warranty repair service.

3.8. Products sent to the Guarantor must be clean and free from any type of dirt (e.g. concrete, mud, oil or grease) that would prevent repairs. Heavily dirty products will not be accepted.

3.9. If the product does not have its own serial number or is illegible, the Guarantor's own marking may be applied to the product for identification purposes.

3/10 Before repairing the product delivered to the Guarantor, it will be diagnosed in terms of the fault and its description provided by the Customer in the Repair Report Form. If the technical condition of the delivered product differs from that declared in the Repair Report Form, the Guarantor reserves the right to refuse to accept the product and to charge the Customer with the diagnosis costs in the amount of EURO 50.00 net.

3/11. If the repair reported by the Customer is not recognized as a warranty repair, he will be notified of this fact and the reasons for not covering the defect with warranty repair, in the form of a message sent to the e-mail address provided in the Repair Report Form. This message will also be accompanied by a Commercial Offer for the repair containing the scope, cost and estimated date of its completion. In this case, the User will also be obliged to cover the diagnosis costs incurred by the Guarantor in a lump sum of EURO 50.00 net. Then, the appropriate provisions for post-warranty repairs will apply.

3/12. If the complaint is accepted, the Guarantor, at its own discretion, repairs the part or replaces the defective product, unless the Parties decide otherwise in a separate agreement. The defective product or its parts are the property of the Guarantor.

3/13. The Guarantor is obliged to perform warranty repairs immediately.

3.14. After completing the warranty repair, the Guarantor will inform the Customer about its completion and the date of possible collection or return of the product to the address and personal data indicated in the Repair Report Form.

4. Post-warranty repairs

4.1. After the warranty period expires, for the products indicated in point 2.1, the Guarantor provides for the possibility of paid repairs in accordance with the following rules.

4.2. The conditions for starting post-warranty repairs are:

a) correct completion by the User of the Repair Report Form on the website www.faraone.pl, i.e. completion of all fields marked with (*).

b) delivery of the defective product to the Guarantor's office within the time agreed with him, at the User's expense.

4.3. In exceptional situations, the Guarantor provides for the possibility of diagnosis and possible repair at the place of use of the reported product. In such a case, the Applicant will bear the cost of the diagnosis and will be charged the flat-rate cost of the arrival of the Guarantor's representative, specified in the Commercial Offer sent to the e-mail address indicated in the Repair Application Form. Such an offer requires acceptance via a return message.

4.4. After diagnosing the fault and before undertaking the repair, the Guarantor informs the Applicant, in the form of a Commercial Offer sent to the e-mail address indicated in the Repair Application Form, about: the diagnosed fault and the scope of its possible repair, costs and estimated time of repair. It does not apply to repairs made at the Ordering Party's premises. In this case, there is an oral agreement on the scope and cost of repair, concluded between the representative of the Guarantor and the authorized representative of the Applicant.

4.5. Based on the information referred to in point. 4.4., the reporting party decides on the further course of removing the defect. The Applicant's instruction in this respect should be made in the form of an e-mail sent back to the Guarantor within 3 business days from the date of its receipt. In justified cases,

GUARANTEE

at the request of the Applicant, the above-mentioned deadline may be agreed individually with the Guarantor.

4.6. In the absence of the Applicant's decision within the deadline referred to in point. 4.5., and also in the event of resignation from the repair, the Guarantor will inform about the need to collect the product from the Guarantor's office. This information is sent to the e-mail address provided in the Repair Request Form. The message will also include an electronic VAT invoice covering the cost of the diagnosis, with a set payment date.

4.7. In the situation referred to in point 4.6., taking into account the danger resulting from the use of a defective product and the liability of the Guarantor as the last user, all products will be sent back / handed over to the Applicant in a disassembled state.

4.8. A repair whose removal cost based on product diagnosis is less than 30% of the net value of the list price of the new product will be performed on the basis of the Repair Report Form alone (i.e. without the information referred to in point 4.4.). In the opposite case, the provisions of point 4.4 apply. and subsequent ones.

4.9. After completing the post-warranty repair at the Guarantor's office, he informs the Applicant about the completion of the repair and the need to collect the product. This information is sent to the e-mail address provided in the Repair Request Form. The message will also be accompanied by an electronic VAT invoice covering the costs of removing this defect, with an agreed payment deadline.

4/10 Damaged parts of the product replaced during post-warranty repairs remain the property of the Guarantor.

4/11. If the product is not collected within 7 days from the date of receipt of the information referred to in point. 4.9., the Guarantor requests the Applicant in writing (e-mail) to collect the product within 7 days from the date of receipt of this request. After the ineffective expiry of the additional deadline set in this way, the Guarantor is entitled to charge a contractual penalty in the amount of PLN 123.00 for each day beyond the set deadline for its non-contractual storage.

5. Final provisions

5.1. Marked in point. 1.1 address details of Faraone Poland Sp. z o. o. indicate the registered office and correspondence address of the Guarantor.

5.2. The terms and conditions enter into force on2025 and are valid indefinitely.

5.3. The Guarantor reserves the right to unilaterally change the provisions of the Conditions at any time, without the need to justify the changes.

5.4. In the event of a change to the Terms and Conditions, the Guarantor will inform about it by publishing the consolidated text of the Terms and Conditions on the website www.faraone.pl.

5.5. Unless otherwise stated, changes to the Terms and Conditions come into force on the day of their publication on the website www.faraone.pl.

5.6. If current or future provisions of the Terms are and will be legally ineffective or invalid in whole or in part, this shall not affect the validity and effectiveness of their remaining provisions. In place of ineffective or invalid provisions of the Conditions, the relevant provisions of the Civil Code will apply.

5.7. The courts competent to resolve any disputes related to these Terms and Conditions will be the Common Courts having jurisdiction over the seat of the Guarantor.

TRANSPORT, STORAGE AND MAINTENANCE

For transport and storage, all elements of the rolling towers should be properly protected against potential damage (dents, cracks). Store the carefully arranged and packed elements in a dry place away from sunlight. Mobile towers do not require extensive maintenance. Remove dirt regularly, e.g. with water or turpentine.

FARAONE POLAND Sp. z o.o.

ul. Prosta 32, Łozienica

72-100 Goleniów

tel.: +48 91 579 03 90

e-mail: info@faraone.pl

www.faraone.pl